


# SAILBOAT WEATHER VANE

Use plywood or 1/4" wood. To enlarge designs A and B, rule 1" squares and sketch the designs on the wood, Fig. 1. Cut out the designs with coping or scroll saw. Cut 2 sticks; Fig. 2 and Fig. 3. Nail pieces A and B to stick; see Fig. 4. Then attach to the end of the 1" by 1" stick; Fig. 5. Paint your weathervane.

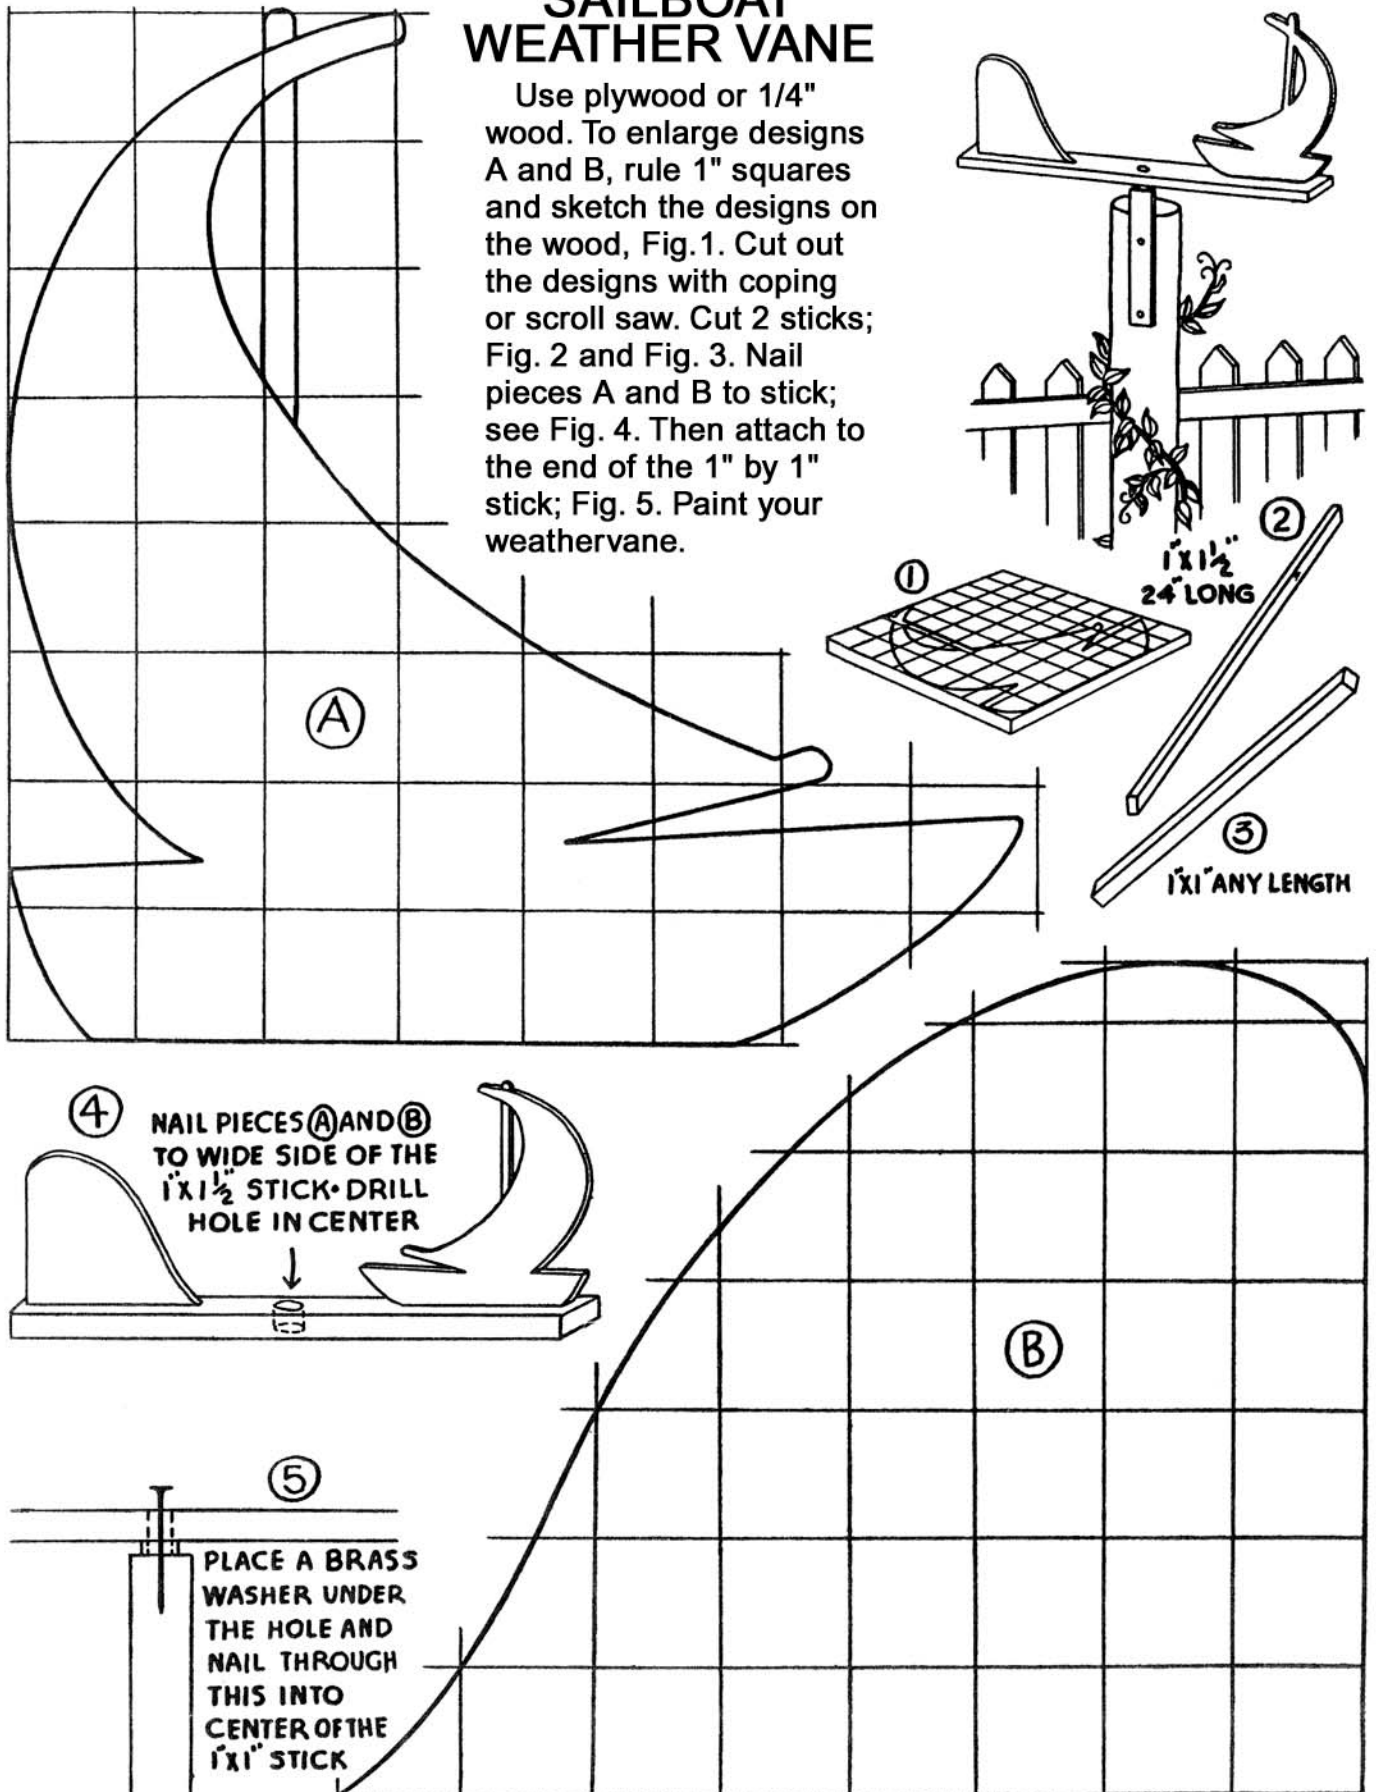

(A)

(1)

1x1/2" 24" LONG

(2)

(3)

1"x1" ANY LENGTH

(4)

NAIL PIECES (A) AND (B) TO WIDE SIDE OF THE 1x1/2" STICK. DRILL HOLE IN CENTER

(B)

(5)

PLACE A BRASS WASHER UNDER THE HOLE AND NAIL THROUGH THIS INTO CENTER OF THE 1"x1" STICK